

Bezel Width = 10mm (.39") Unit: mm (inch) A B Frame Width = 28.2 mm (1.1") Bezel Width = 10mm (.39")

Unit: mm (inch)	A	В	C	D
AR90H-CLR	2013	1993	1142	1122
	(79.3")	(78.5")	(45.0")	(44.2")
AR100H-CLR	2234	2214	1265	1245
	(88.0")	(87.2")	(49.8")	(49.0")
AR120H-CLR	2677	2657	1514	1494
	(105.4")	(104.6")	(59.6")	(58.8")


Note: The listed measurements are for general reference only.

Screen Maintenance


Dust, dirt and scratches on the projection screen surface will affect the quality and performance of the projection image. Follow the instructions below to properly maintain the screen.


- 1) The screen surface has a horizontal structure. **DO NOT** wipe the screen up and down or in a circular motion. *Wipe from left to right only*.
- 2) Clean the dust on the screen surface with a soft brush or microfiber cloth. A rough towel or cloth may damage the screen's surface.3) Gently wipe the screen with a moistened
- microfiber cloth with mild soap diluted in water.


 Notes: The following precautions should alway be followed to avoid damaging the material, which is not covered under warranty.
- Don't <u>touch</u> the screen material to avoid leaving fingerprints. *Use gloves when handling the material*.
- Don't <u>scratch</u> the material, as it will leave permanent markings on the screen's surface.
- Don't <u>point</u> to the screen material with a fingertip or other sharp objects to prevent damage to the material.
- Don't use acetone, benzene, alcohol and any other organic solvents to clean the screen material. Using such chemicals will permanently damage the screen.

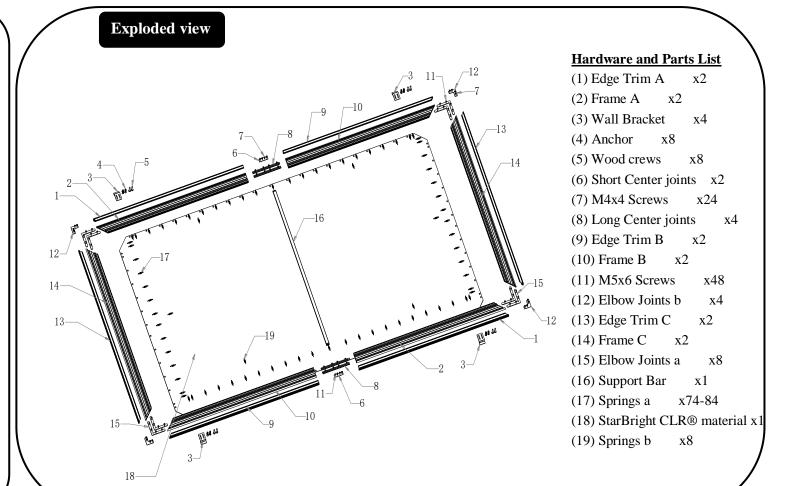


Screen Installation

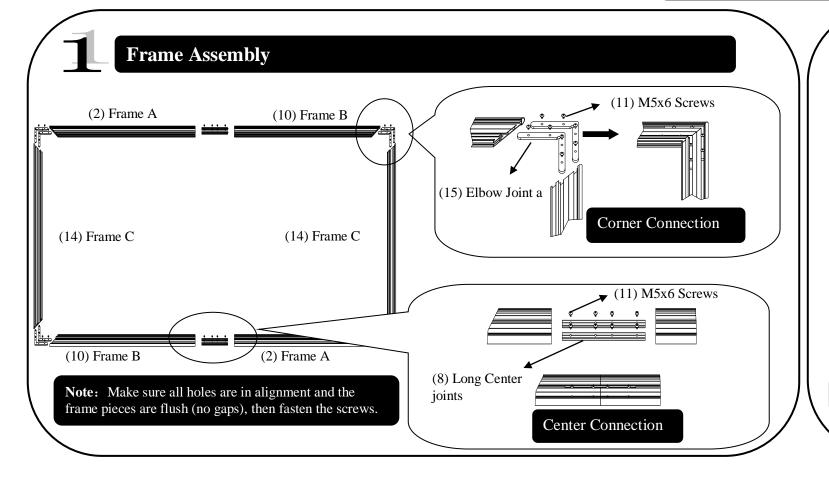

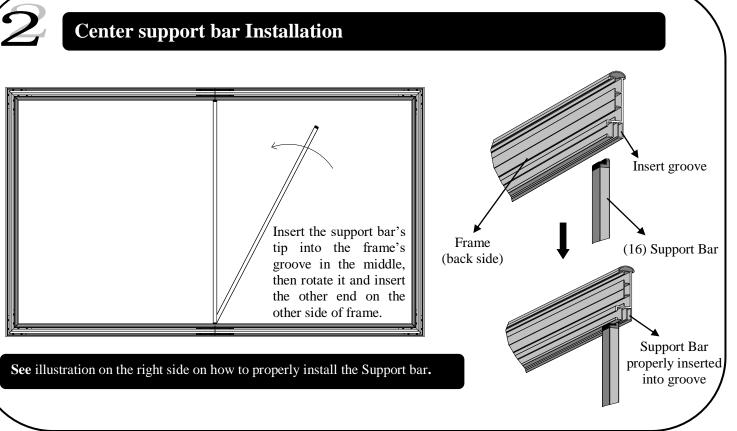


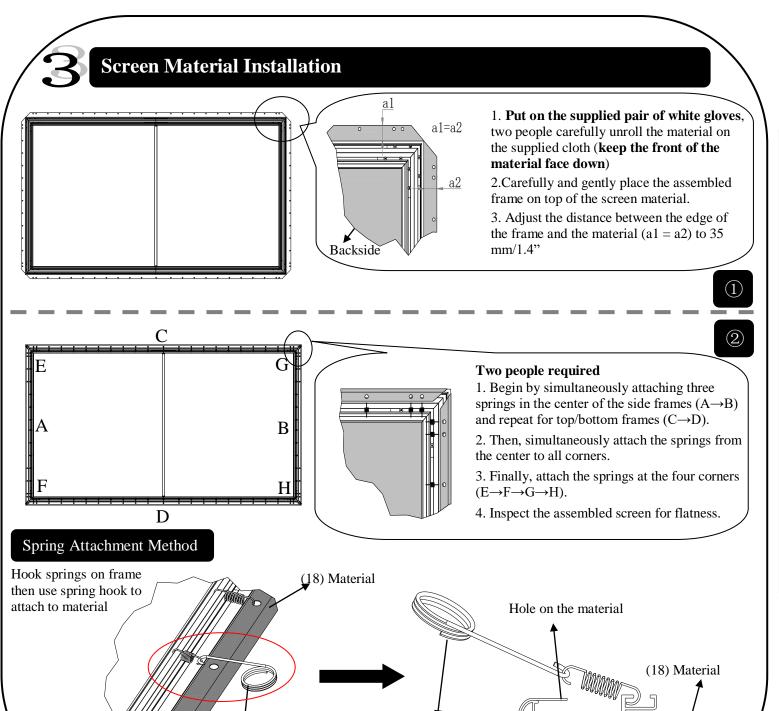

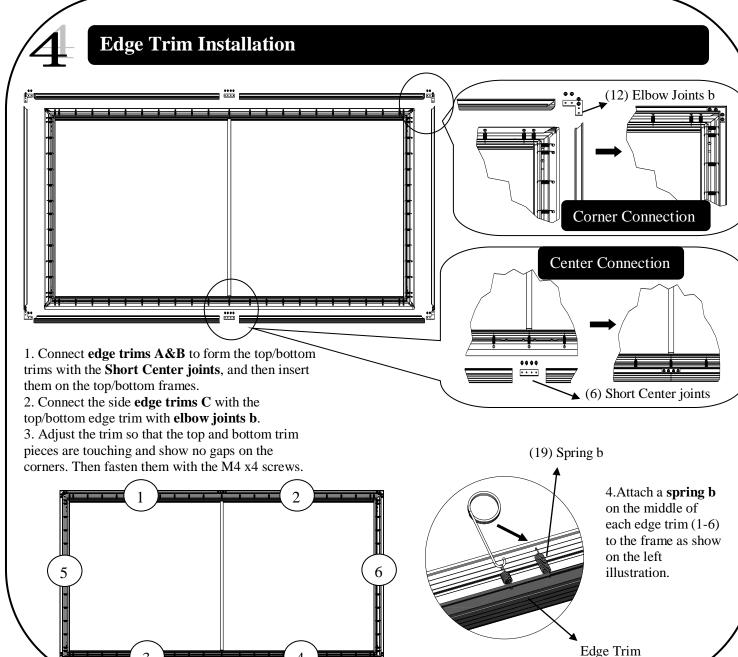

Wall Installation


3

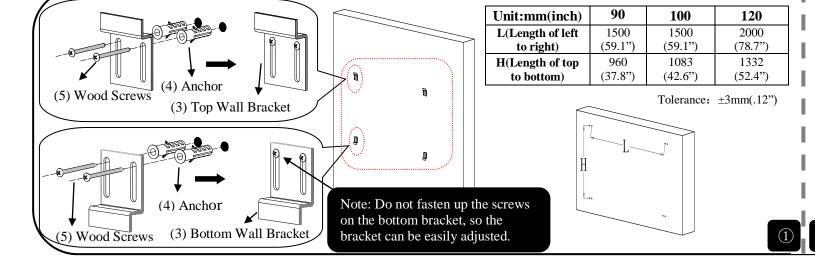



Spring hook

(17) Spring a

Spring hook

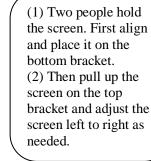

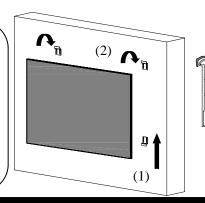

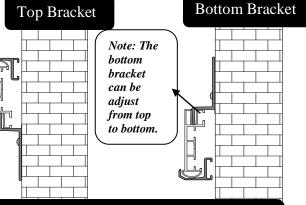

Note: Make sure the direction of the CLR material is correct before you hang the screen to the wall. The material is labeled top or bottom.